

RGR08 (HOTT compatible receiver)

USER MANUAL



1. INTRODUCTION

1.1 Compatibility:

Cooltec RGR08 Compatible Receiver is designed to use with all of the HOTT system transmitters.

1.2 Specifications:

Operating Voltage Range : 3.5~8.4V
Dimension : 47.5X25.5X15mm
Weight : 11g
Operating Range : Full range
Number of Channels : 8 standard channels



2. BIND PROCEDURE AND LED STATUS

2.1 Bind procedure:

- 1) Turn on the transmitter and receiver, the status LED of the receiver blinks red until the receiver is bound to the transmitter.
- 2) Enter BIND mode of your transmitter and press&hold on the F/S button on the receiver for over 3 seconds, the red status LED and the green status LED blink together. After that, follow the procedures of your transmitter to bind, the system will connect within a few seconds. Once connected, the status LED on the receiver turns solid green, indicating the receiver is bound to the transmitter.
- 3) If the binding process has failed, repeat the whole procedure.

2.2 LED Status:

RED LED	GREEN LED	STATUS
BLINK	OFF	No signal reception
BLINK	BLINK	Binding Mode
OFF	SOLID	Receiving signals

RGR08 (HOTT 兼容接收机)

使用说明书




1. 产品介绍

1.1 兼容性:

Cooltec RGR08 兼容接收机兼容所有的HOTT系统的发射机。

1.2 产品规格:

工作电压范围 : 3.5~8.4V
产品尺寸 : 47.5X25.5X15mm
产品重量 : 11g
遥控距离 : 全范围
通道数量 : 8 个标准通道

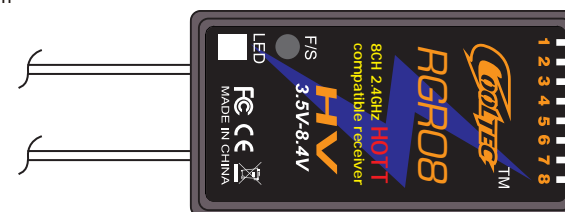

2. 对码步骤和LED灯状态

2.1 对码步骤:

- 1) 打开遥控器和接收机，红色状态指示灯会一直闪烁直到接收机和遥控器对上码；
- 2) 进入遥控器的对码模式菜单，按住接收机上的F/S按钮超过三秒钟，接收机上的红色LED灯和绿色LED灯会同时闪烁，然后在发射机菜单中选择确认对码，对码过程将会在几秒钟内完成，如果对码成功，发射机上的状态LED指示灯显示为绿色常亮。
- 3) 对码失败则重复整个对码步骤。

2.2 LED 状态:

红色LED	绿色LED	模式
闪烁	灭	无接收信号或没有对码
闪烁	闪烁	对码模式
灭	常亮	正常工作