

Instruction for use



Instructions before use:

Don't use a hand-held phone while driving. When driving inevitably when using the phone, please use a hands-free accessories. In some countries, it is illegal to make or receive phone while driving!

Wireless devices can cause interference on the plane. In-flight cell phone use is illegal and risky. Please make sure your mobile phone in flight shutdown, closed before enter the danger zone.

Strictly abide by the relevant laws, regulations and rules of mobile phone use dangerous area. Into the influence of explosion place, such as gas station, oil tank, chemical plants, or before blasting process is ongoing, please turn off the phone.

Keep all special rules

Follow any anywhere in hospitals, the implementation of special rules, to ban the use of mobile phones or cause interference or danger, will turn off the phone. In medical apparatus and instruments, such as a pacemaker, hearing AIDS and other electronic medical equipment near the appropriate use of mobile phones, because it may cause interference to the equipment.

interference

Any mobile phone conversation quality may be affected by radio interference. Below the antenna built in mobile phone inside, located in the microphone. Don't touch the antenna area during the dialogue, in order to avoid conversation quality deterioration.

Qualified service

Only qualified personnel to install or repair telephone equipment. Their installation or repair cell phones may bring great danger and in violation of the provisions of the warranty.

Accessories and battery pack

Use only approved accessories and batteries.

The rational use of

Only use in normal and appropriate way.

Emergency call

Ensure that call and put into use, enter the emergency number, 112, for example, and then press the dial key. Give your location and briefly explain your situation. Don't end the call until to do so.

Note:

Like all other mobile phone, due to network or radio transmission problems, the mobile phone may not support all the functions described in this manual. Some networks even do not support the emergency call service. So don't just rely on mobile phone for emergency communication, such as first aid. Please consult the local network operator.

Matters needing attention

Keep dry and mobile phones. Away from the rain, moisture, liquid, or other possible corrosion materials of electronic circuit.

Do not use or store in dusty place mobile phone, so as not to damage the effective part of the phone.

Do not put mobile phone in a high temperature place. High temperature will shorten the service life of electronic circuit, damage battery and some plastic parts.

Don't put the phone in a cold place. Otherwise, the movement of the mobile phone to the constant temperature, the moisture is formed within the mobile phone to damage the electronic circuits.

Don't throw, knock, or shake mobile phone, cell phone because it can damage the

internal circuit and precision components.

Power key

Power keys on the front of the phone on the right side. When using the phone, you can press this key to lock the screen; If press and hold this key, it will pop up a telephone options dialog. Here, you can choose to adjust the configuration file closed or turn on the power supply.

Return key

Beside the power button, press return on a layer of interface.

The main interface key

Beside the return key, keys directly back to the main interface.

dial

Dial on the phone to the left of the front and button pop-up telephone dialing the number keys interface.

PTT button

PTT key is intercom special keys, press the PTT button after open phone intercom function can begin to speak, lift can receive other group members.

The volume button

The volume keys in the side of the phone. You can press it to adjust the phone ringtone volume.

Camera button

Camera button at the bottom of the cell phone on the left side of the volume button, press the camera viewing into the interface, press the photo in time.

The SOS key

SOS rows on the top of the phone. Long press it to start the SOS function, press the

return key to cancel.

A knob

Knob on the phone after open the hardware interface of intercom by turn adjusting intercom spectrum.

M6 interface

M6 interface is connected to the professional intercom earphone and camera interface.

The charging hole

Charging hole in the mobile phone on the right side, open the rubber plug used 5 pin connecting interface cable charger and connect the computer equipment data transmission.

Install the SIM card and battery

SIM card carries useful information, including your mobile phone number and PIN (personal identification number), PIN2 PUK (PIN unlock key), PUK2 (PIN2 unlock key), IMSI (international mobile user id), the network information, the contact data and message data.

Note:

When the power is turn off the phone, wait a few seconds before remove or insert SIM card.

Be careful when operating a SIM card, because the friction or bend will damage the SIM card.

Appropriately to mobile phone and its accessories (such as SIM CARDS) in out of the reach of children.

The installation

Will gently insert SIM card into the SIM card slot, corner cutting alignment slot of incision, card of the gold plate for download, until the SIM card can't push further.

When the battery 3 convex points into the sump tank inner buckle under the above battery and push up the battery card buckle.

Note:

SD card is a tiny object. Put it out of the reach of children, lest the child swallowed it!

3.2 rechargeable batteries

Your mobile phone can monitor and display gaze of the battery.

Usually battery residual energy by display screen in the top right corner of the battery level icon indicates.

When the battery power is insufficient, the mobile phone prompts "battery low".

Use the travel adapter;

Install the batteries before the battery to mobile phones.

Will travel charger adapter with mobile phone in slot connection. Make sure the adapter insert completely.

Insert the plug of travel charger appropriate power outlet.

During charging, the battery icon in the battery level grid flashing until fully charged battery.

When at the end of the charging process, the battery icon is no longer flashing.

Note:

Ensure that the plug of the charger, earphone plug and USB cable plug is inserted in the right direction. Insert them into the wrong direction can lead to failed to charge or other problems.

Before charging, ensure the standard of the local power supply voltage and frequency match the rated voltage and power of the travel charger.

In idle screen, select menu/multimedia/camera into the preview screen.

Taking pictures

Press photo capture, you can through the options menu for other operation.

The video player

Using video, you can play the video clip in the equipment (for example, by the camera to capture video) or video files stored in the SD card (if inserted).

Audio player

You can use this feature to listen to music. In the play interface, through the middle button can control the music play/pause and stop, through the or so key can switch to play songs in the playlist, you can adjust the volume up and down keys, etc.

The message

You can use a mobile phone short message with your friends and exchange messages and multimedia information.

In idle screen, select menu/message/written messages.

The input information, choose send.

Edit the recipient.

Press the "send" send a message.

File management

This kind of mobile phone for quick access to and use of various media resources. Standby mode, select menu/management/cell phone into the file management interface, its main function supports the following functions.

Set up the default folder structure tree, these folders with other applications (such as audio, my music, photos, video, etc.) the default storage location;

Support the creation of a new folder;

Support the necessary file operations, copy, delete, rename;

Support for T - flash, formatting, editing, and other operations. After formatting, will generate a file to store music called "My.", "Videos" to store video.

Support preview and edit the images.

bluetooth

Phone support bluetooth data transmission, set to open or close the bluetooth function.

Visibility: choose "on" or "off", if you close the features, is not in the external search other bluetooth devices.

My device: displays the list of bluetooth devices, if the list is empty, select the "search" to support new equipment.

My name: edit a bluetooth device name.

WIFI

WIFI in set open can find of the wireless network, you need to enter the password using the wireless network connection.

GPS

GPS is to provide the positioning of the mobile phone hardware system, can open in the set, other applications require the use of mobile phone positioning services to open this function in the cell phone.

The function menu

In this menu, phone for you to provide the following functions: calendar, calculator, unit conversion, timer, stopwatch, memos, etc. All preview.

Call the police

Select the "clock" icon on the main menu, you can change the existing alarm or add new warning to set the alarm.

Set up the

In setting up WIFI bluetooth GPS SIM card network services such as language input method application security account according to prompt more options.

note

If need to look up to the function of mobile phone and information, can be in after entering the start menu in the search bar above to look up.

You are welcome to use our products, due to equipment upgrades and system hardware description does not accord with the product functions and parameters such as problem our company reserves the final interpretation!