

4

Glare flashlight



Contents

- 01、Product Introduction
- 02、Product Parameters
- 03、Power Switch and Focusing
- 04、DC Interface and Nut Interface
- 05、Convex Mirrors and Lampshades
- 06、Wireless usage method
- 10、Fishing lamp mode (selective)
- 11、Illumination lamp mode
- 12、Attention

Product Introduction

portable lamp is a high-brightness lighting system. It is small in size, but it can provide users with lighting effect close to that of automobile head lights at night. Its smart chip has five dimming modes, namely high brightness, medium brightness, low brightness, flash and SOS. The upper part of the body can be telescoped to realize stepless focusing to control the illumination range and illumination distance of lights. With the special lampshade, it can also be changed into a high-brightness wireless lighting lamp.

A plurality of interfaces are arranged on the body, for example, the DC interface can be connected with power supply through power cord, the tail spring contact can be supplied with power by Power Bank, and the embedded inch 1/4 screw interface on the body can be connected with a variety of special holders, such as tripods, bicycle handle holders, waist holders, etc., which is convenient for more life scenes.

Product parameters

Parameters may change with product upgrade, please understand

Model	BYS01	Lamp bead	Quad nucleus	Focus Electrodeless zoom	Sizes	About	290mm * 65mm
Voltage	6V	Shell material	Extreme oxygen aluminum alloy	Lens material	Optical glass	Overheat protection	Automatic power reduction when overheating
Lampshade	Have	DC interface	DC-5525-12V	power	12W	Weight	About 380g (excluding Power battery)

Support interface inch 1/4 screw interface

Switch Gear 5 (Highlight, Medium Light, Low Light, Flash, SOS)

Maximum battery life Low brightness:Power Bank 150(about 16hours) Power Bank 192B (about 20 hours)

Highlight: Power Bank 150(about 8 hours) Power Bank 192B (about 10 hours)

Parameters of Power Bank: Please refer to some instructions of Power Bank (pages 1-13)

Power switch and focusing

1. Power Switch Power Switch has five gears: highlight mode, medium bright mode, low bright mode, flash mode and SOS mode.

2. Press the power switch lightly to turn on the highlight mode. Press it again within 2.5 seconds to jump to the next gear, then press it again to jump to the next gear in turn. After more than 2.5 seconds, press it again to turn off the power.


3. The front part of the body extends forward, and the aperture size and irradiation distance of the light can be adjusted. The larger the aperture, the closer the irradiation distance, and the smaller the aperture, the farther the irradiation distance.



DC interface, female interface

1.The vehicle-mounted power cord config DC used by the product can be connected for wired power supply.

2.Support a variety of inch 1/4 screws for matching use, such as tripod, bicycle holder, waist holder, etc.

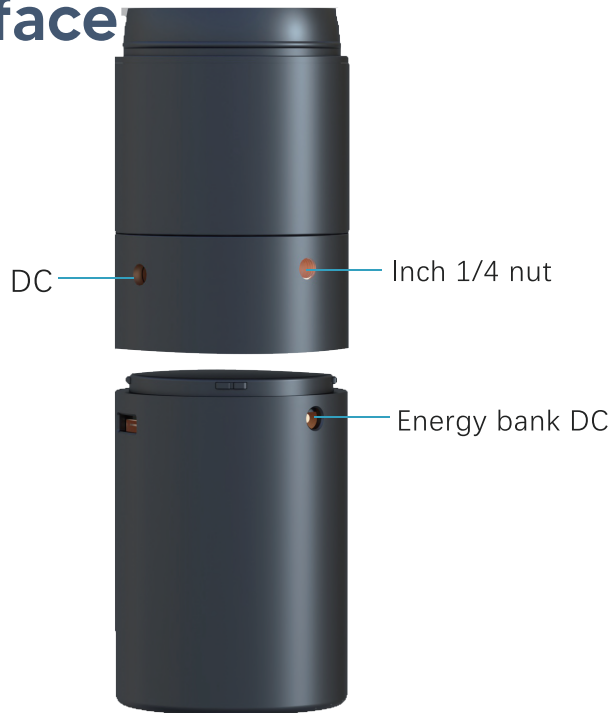

Convex mirror and lampshade


1.. Convex mirrors make illumination more concentrated.

2. The lampshade can be installed on the top of the product, so that the product can change from the concentrated mode to the astigmatism mode of the lighting lamp.



Wireless usage method

1.Remove the decorative ring of the power bank, so that the buttons of the power bank are on the same surface as the buttons of the flashlight. Align the unlocking sign of the power bank with the small triangle sign at the installation interface of the flashlight, and then connect it. Rotate the power bank to the right to align the locking sign of the power bank with the three corner sign of the flashlight, indicating that the installation is complete.

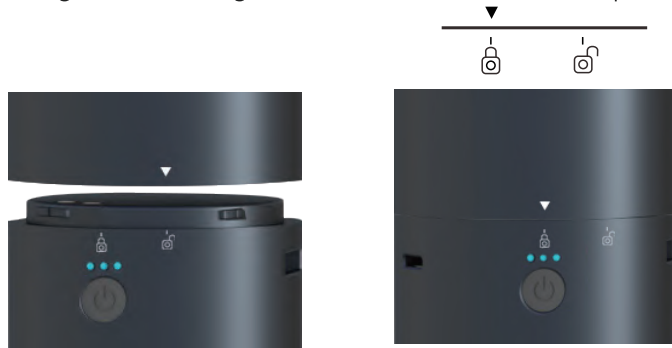

2. Lightly press the power switch of the Power Bank, and see that three indicators are on, Press the power switch on the body of the product lightly to turn on the concentrated lighting mode, hold the front section of the body of the product and stretch forward to zoom, and adjust the aperture size and irradiation distance steplessly



3. This product has high brightness, medium brightness and low brightness in daily lighting. The lower the brightness, the less current consumption, so the longer the battery life. If you need to light up for a long time, it is recommended to choose medium or low light mode to improve the battery life.

4. The lampshade can be directly installed on the top of the product, and the two are connected by pressing. After installing the lampshade, the product can be changed from focusing mode to astigmatism mode like lighting lamp, providing a lighting effect of about 360 degrees at close range.



5. If there is no Power Bank or Power Bank is short of electricity, you can use the vehicle-mounted cigarette lighter data cable attached to the product for power supply



Cigarette lighter wire

(Not configured, can be purchased separately)





Fishing light mode (optional)

Multi-triangular holder can be assembled as fishing lamp



Illumination lamp mode (selective)

Combined with special lampshade, it is assembled as lighting lamp

Attention

Matters needing attention

- 1.The LED lamp inside this product will generate a lot of heat when working, which will cause the body to burn. When holding it in hand, please hold it on the energy bank as much as possible to avoid scalding the hand by the hot product shell.
2. If there is no requirement for brightness, it is recommended to turn on medium or low brightness lighting mode, which can effectively reduce the calorific value of the body
- 3.When the headlights are turned on for irradiation, please lean to the ground as far as possible, and do not irradiate others or your own eyes, so as to avoid eye discomfort or injury caused by strong light.
4. Please open flammable and explosive materials in the shell when using.
- 5.Do not soak this product in rain or water.
- 6.Do not allow children to use this product

