


B10 Pro 无线触摸键盘

说明书

注意：正确操作本产品，请仔细阅读用户手册

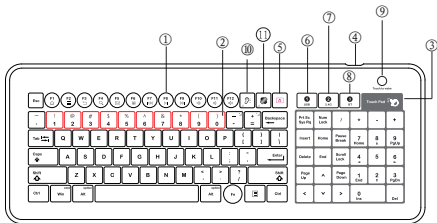

- ① Fn+“F1~F12” 切换多媒体功能
- ② Fn+“1~0” 切换不同的触摸提示音
- ③ 触摸板和数字板的切换按钮
- ④ USB-C 接口（用于充电和有线输入）
- ⑤ 清洁模式开关键(长按3秒直至按键指示灯亮起)
- ⑥ USB 模式切换键
- ⑦ 无线 2.4GHz 模式配对和切换键
- ⑧ 蓝牙模式配对和切换键
- ⑨ 触摸唤醒键
- ⑩ 触摸声音反馈开关键
- ⑪ 触摸震动反馈开关键

声音反馈调大：[Speaker Icon] + [Volume Up]

震动反馈调大：[Vibration Icon] + [Volume Up]

声音反馈调小：[Speaker Icon] + [Volume Down]

震动反馈调小：[Vibration Icon] + [Volume Down]

规格参数

电池容量：内置4000mAh可充电锂电池

待机时间：大约6个月

充电时间：大约4小时

健康等级：表面防水，防指纹涂层

操作温度：0°C~55°C

储存温度：-5°C~50°C

USB模式

用USB线连接键盘和电脑(包装内含有USB线) 按下USB模式切换键 (❶) 待按键提示灯常亮表示键盘连接成功。

2.4Ghz 模式

1. 为了便于操作，键盘在出厂时已与2.4GHz适配器配对（包装内含有适配器），只需将适配器插入电脑，按下2.4GHz模式切换键 (❷) 待按键提示灯常亮表示键盘连接成功。
2. 如果按键指示灯闪烁表示2.4GHz连接失败，您需要重新配对，请下载并安装“随心配软件”根据软件界面提示完成配对。

蓝牙模式

1. 按住蓝牙模式配对按键 (❸) 直到按键指示灯快速闪烁。
2. 在您的设备菜单中选择蓝牙，然后在蓝牙设备列表中找到“B10 Pro”点击配对。
3. 如果蓝牙模式按键指示灯常亮表示配对成功. 如果指示灯闪烁，请重复上述1~2步操作。
4. 如需要更换连接其他设备，请重复上述第1步操作并在新设备上重复第2步操作。

睡眠模式


- 为了延长电池使用寿命和工作时间，键盘在10分钟内无触摸将会进入省电模式
- 点击右上角触摸唤醒键 () 即可唤醒键盘

Touch to wake

B10 Pro Wireless Touch Keyboard

User's Manual

Note: Please read the user manual carefully
before you start using this product

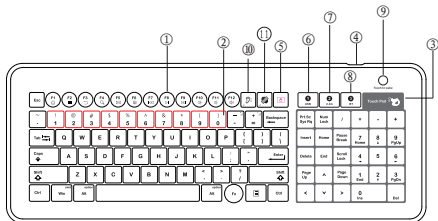

- ① Fn+"F1~F12" Switch between multimedia functions
- ② Fn+"1~0" Toggle different key tone
- ③ Touch pad and Numeric Pad switch key
- ④ USB interface
- ⑤ Cleaning lock key(Hold 3 seconds Until the indicator lights up)
- ⑥ USB connection mode
- ⑦ RF 2.4GHz connection mode
- ⑧ Bluetooth connection mode
- ⑨ Touch to wake
- ⑩ Auditory feedback on/off key
- ⑪ Tactile feedback on/off key

Audition turn up: [Speaker icon] + [Up arrow]

Vibration turn up: [Vibration icon] + [Up arrow]

Audition turn down: [Speaker icon] + [Down arrow]

Vibration turn down: [Vibration icon] + [Down arrow]

Specifications

Battery capacity: 4000mAh built in rechargeable lithium battery

Standby time: About 6 months

Charging time: About 4 hours

Operating temperature: 0°C~50°C

Storage temperature: -5°C~55°C

USB MODE

Deploy by USB Cable (Cable included): If deploying by USB cable, just plug it in, press the "USB" key (❶), and start typing. Connection is confirmed by a steady LED indicator.

2.4Ghz MODE

1. Easy to use, the keyboard's "2.4GHz Channel" (❷) is connected to Free Pair USB adapter with factory default setting. You just need to plug in adapter to computer, to play for your first time to use it.
2. If the 2.4GHz connection fails, you need to reconnect, please click on "Free Pair Software", according to the interface prompts to complete the pairing.

BLUETOOTH MODE

1. Power on your device.
2. Long press the Bluetooth button (❸) until the indicator light flashes, then release.
3. Click the Settings icon on your device.
4. Search and select "Bluetooth" on your device's "General" menu.
5. On the subdirectory of "Devices", select device name "B10 Pro"
6. The Bluetooth Keyboard should now show connection on your device's menu.
7. If your device goes into standby mode, the Bluetooth Keyboard should still be synced.

If you power-off your device, you may need to re-sync it. If you use the Bluetooth

Keyboard with a new device, or it doesn't connect properly, follow the steps above to re-sync.

SLEEP MODE

- To maximize battery life, Medical Waterproof Keyboard will enter sleep mode after 10 minutes of not being in use.
- The keyboard will awake from sleep mode by touching the botton



Touch to wake

蓝牙兼容性

- Windows10 或更高版本
- Mac OS X 10.10 或更高版本
- iOS6.0或更高版本 (iOS系统只支持键盘功能，没有触摸板功能)
- Android 设备蓝牙4.0或更高版本。
- 带键盘的蓝牙智能就绪设备需要支持 (蓝牙HID)


键盘充电

- USB线一端连接键盘另一端接入电源，触摸唤醒键的指示灯亮红色表示键盘正在充电，红色转为绿色表示充电完成。
- 充电时间大约4小时左右
- 当键盘电量不足时，触摸唤醒键的指示灯“红色闪烁”


电量指示

- 60%-100%：绿色常亮
- 20%-60%：黄色常亮
- 少于 20%：红色闪烁
- 充电：红色常亮

快捷手势触控功能

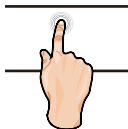

单指单击为单击鼠标左键功能
单指滑动为鼠标光标移动功能

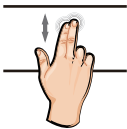

双指单击为单击鼠标右键
双指滚动为鼠标滚轮功能

BLUETOOTH COMPATIBILITY

Windows Compatibility	Windows 10 or later
Mac Compatibility	Mac OS X 10.10 or later
Smartphone and Tablet Compatibility	iPhone or iPad with iOS 6.0 or later, Android tablet or Smartphone with Android 4.0 or later. Bluetooth Smart ready device with keyboard support required (Bluetooth HID)


CHARGING THE KEYBOARD

- Plug the USB cable (included) into the keyboard USB Type C port and then the keyboard goes into the USB outlet mode.
- The charging LED light will illuminate in red during charging. The LED light turns in green when the battery is fully charged.
- The keyboard takes approximately 4 hours to be fully charged.
- The power led indicator () will blink when the Keyboard's battery needs recharging. **Touch to wake**


BATTERY REMINDER

- 60%-100%: Green LED light on
- 20%-60%: Yellow LED light on
- Less than 20%: Red LED flash
- Charging: Red LED light on

GESTURE CONTROL FUNCTION

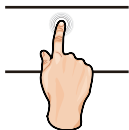

One finger gesture will move the cursor around the screen.

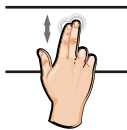

Two finger gesture will scroll the page.

Warranty Card


Company / personal name: _____

Address: _____

Tel: _____

Keyboard model: _____

Purchasing date: _____

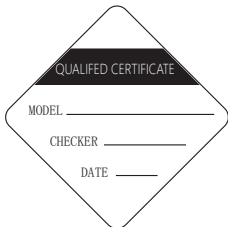

保修卡

公司或个人名字：_____

通讯地址：_____

联系电话：_____

商品型号：_____

购买日期：_____



本有限质保不涵盖由于以下原因导致的问题或损坏

- (1) 意外事件、误用、操作不当或任何未授权的维修，改装或者拆卸；
- (2) 操作或者维护不当，使用过程中违反产品说明或连接不适当的电源；
- (3) 本卡内容不得擅自涂改，并请保存产品包装盒，以维护您的合法权益。